

# DRILLING PORCELAIN THE EASY WAY!



## HOW TO USE TILE RITE UNIVERSAL GUIDE + SUCTION CUP & DIAMOND DRILL BITS



Select the correct size diamond drill bit for your job.



Check the location & dimension of the hole to be drilled and mark directly on to the tile.



Set up the universal guide with suction cup into correct position.



To secure the guide, pull up the handle to obtain suction. This will secure your drill bit when drilling.



Fill your water bottle with water.



Build up water pressure by pumping the plunger up and down.



Connect the water hose to the universal guide.



You can see the water hose connection point just below the suction cup.




Attach the diamond drill bit to your drill and secure in place.



Put your drill in place and tighten the screws on the guide.



Activate the water release button on the cooling system.

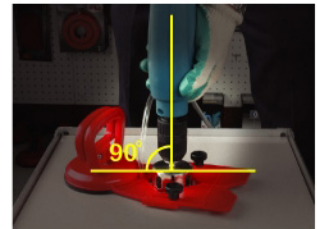

Activate your drill, when drilling make sure you are maintaining a 90° angle and even pressure.



Once you have successfully drilled your hole, turn off drill and water spray.



You will be left with tile debris in your drill bit.



Remove tile debris from the drill bit.



Congratulations you have successfully drilled your hole!

### HOW TO ADJUST THE UNIVERSAL GUIDE FOR DIFFERENT SIZE DIAMOND DRILL BITS



6-35mm  
Diamond drill bits

For 6-35mm diamond drill bits, use the small v notch side of adjustable frame.



35-83mm  
Diamond drill bits

For 35-83mm diamond drill bits, reverse the adjustable frame and use the larger v notch side.



83-113mm  
Diamond drill bits

For drill bits exceeding 83mm, remove adjustable frame piece and use the remaining section as a partial guide.

**TILING MADE SIMPLE**